

INSTALLATION INSTRUCTIONS ROLLAWAY BATH/SHOWER SCREENS


PLEASE NOTE:

- 1) WHERE POSSIBLE FIT CANISTER ON SAME SIDE AS SHOWER HEAD
- 2) PLASTIC MOULDED HANDLES FACE TO OUTSIDE OF SHOWER
- 3) SILICONE SEALANTS ARE NOT SUPPLIED

- Check that fixing surfaces of opening are clean of soap and are dry. If they are not, the fixing tape will not adhere.
- Place the canister (B) on the tub/shower sill so the bottom rail (D) will sit as close to the inside of the sill as possible
- Position canister vertically. Mark position on jamb. (This is Dim Y). Transfer (Dim Y) to wall at top of canister (B) and mark. Remove canister, apply bathroom sealant to still under bottom of canister in line with centre of end cap (A) to create a watertight seal.
- Peel tape off back of canister. IMPORTANT, keep canister away from jamb once backing tape if removed. Align canister over sealant on sill, apply downward pressure first, then press canister back into position on jamb. Press over full length of canister to ensure adhesion.
- Measure distance from front sill to front side of cap (A) (Dim Z). Transfer to opposite side of door frame at positions (H) and (J). Ensure a straight line is drawn between (J) and (H). (This is Dim Z).
- Take the side extrusion (F) and place it vertically (Dim Z) with the groove in the extrusion facing in towards the tub/shower. Peel off backing strip and fix the extrusion opposite tub/shower canister (B).
- Measure the opening width from inside of bottom canister cap (A) to inside of side extrusion (F). Cut bottom rail less 1/4" (5mm) for clearance. Wrap the rail to avoid scratching, while cutting at this mark. File rail ends and clean out filings.
- Apply bathroom sealant to step between Cap (A) and side extrusion (F) before installing bottom rail.
- Engage screen rollers with bottom rail (D) and slide bottom rail (D) into cap (A) and fasten in place with cap (H), by sliding over button in bottom of side extrusion (F).
- Measure opening width from inside of top canister Cap (G) to inside of side extrusion (F), cut top rail less 1/4" (5mm) for clearance.
- Engage top rollers in top rail (I) and fit into top canister cap (G), fasten in place with cap (J) by sliding over button in top of side extrusion (F).
- Seal bottom rail and any other gaps with an approved anti-mould tile and bathroom sealant.

NOTE: IF FIXED TO SIDE PANEL –

Drill down through top of canister cap (G) and screw fix track to lock into position. Repeat for opposite side (J) but screw through inside face.

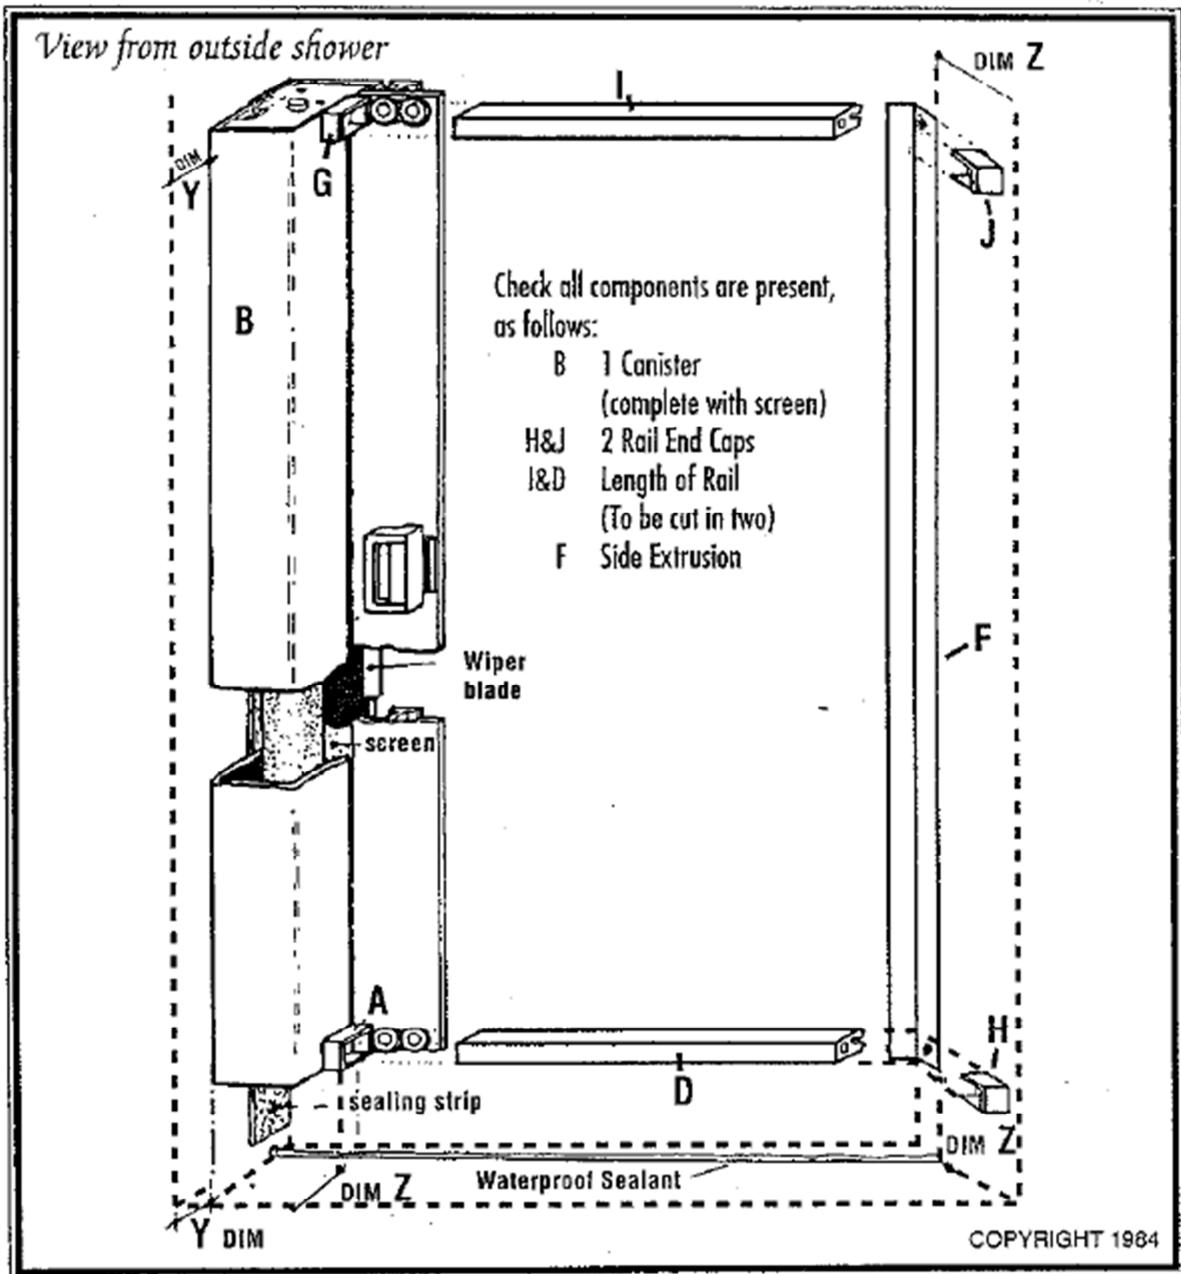

MAINTENANCE OF YOUR ROLLAWAY SCREEN

- **Lubrication**
The use of silicon lubricant in both top and bottom rails is recommended to improve operation.
- **Cleaning**
Clip screen into closed position while you wipe it. Wipe all surfaces with any all purpose non-abrasive bathroom cleaner.