


INSTALLATION INSTRUCTIONS FOR AMAZON BATH PANEL (FIXED)

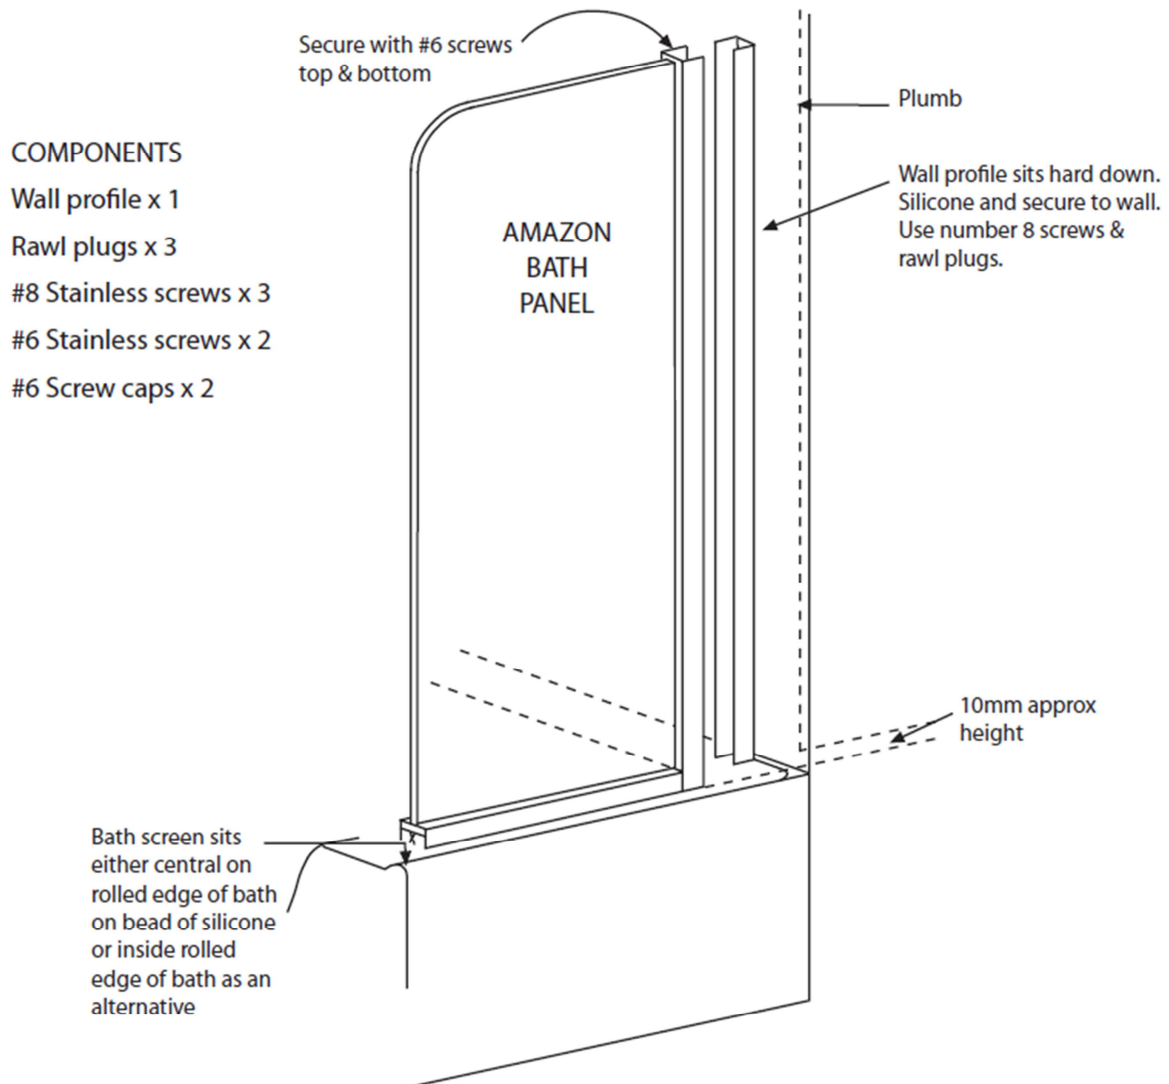

- STEP 1** Unwrap the bath panel and check the components. Remove the wall profile.
- STEP 2** Place profile in required position either central over rolled edge bath or on the flat of the bath. Plumb the profile to the wall and mark the outer edge. Measure and mark the height of the glass panel.
- STEP 3** Secure the profile to the wall. Place a bead of silicone between the wall profile and the wall before finally screwing home. Silicone any exposed joints between bath and wall, below the profile.
- STEP 4** Silicone under the outside edge of the panel and/or centrally along the top of the baths with rolled edge. The wall profile slots inside the bath panel, the bottom edge of the bath panel will sit lower than the bottom of the wall profile. Secure with screws provided by drilling a hole through the top and bottom of the wall profile approx. 20mm from each end.